


## Step 1

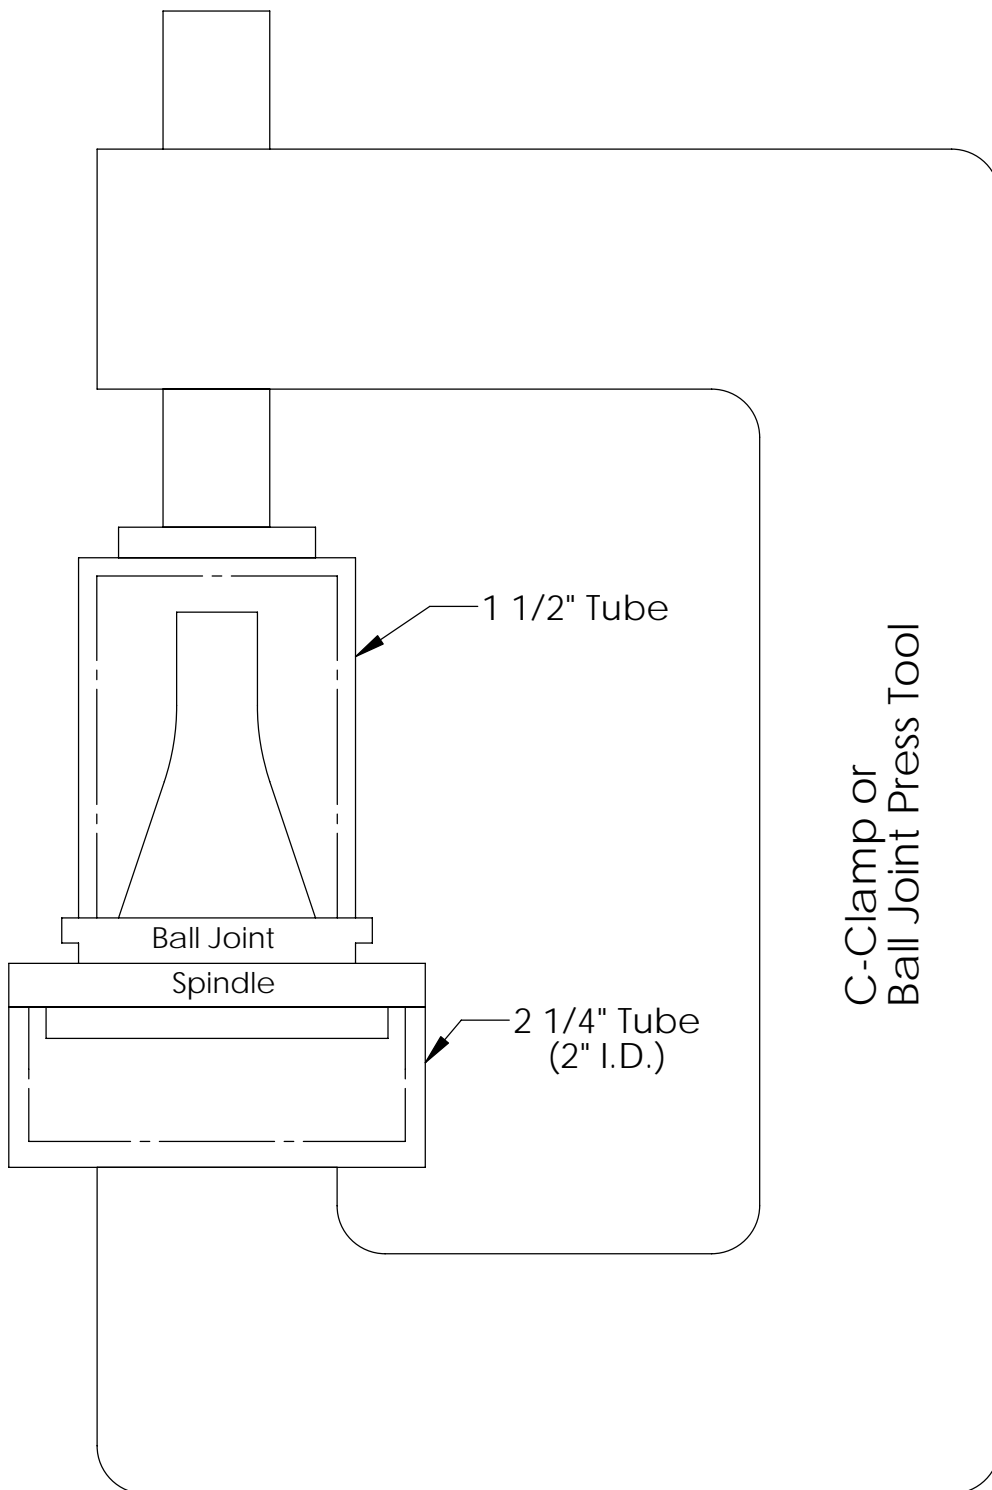


Press Balljoint  
Down - Out of  
Spindle

1 1/2" Tubing 2 1/2" Long  
Capped on one end

2" I.D. Tubing 1 1/4" Long  
Capped on one end

Remove ball joint castle nut, boot and snap ring.  
Press ball joint down and out of spindle using tubing.

## Step 2

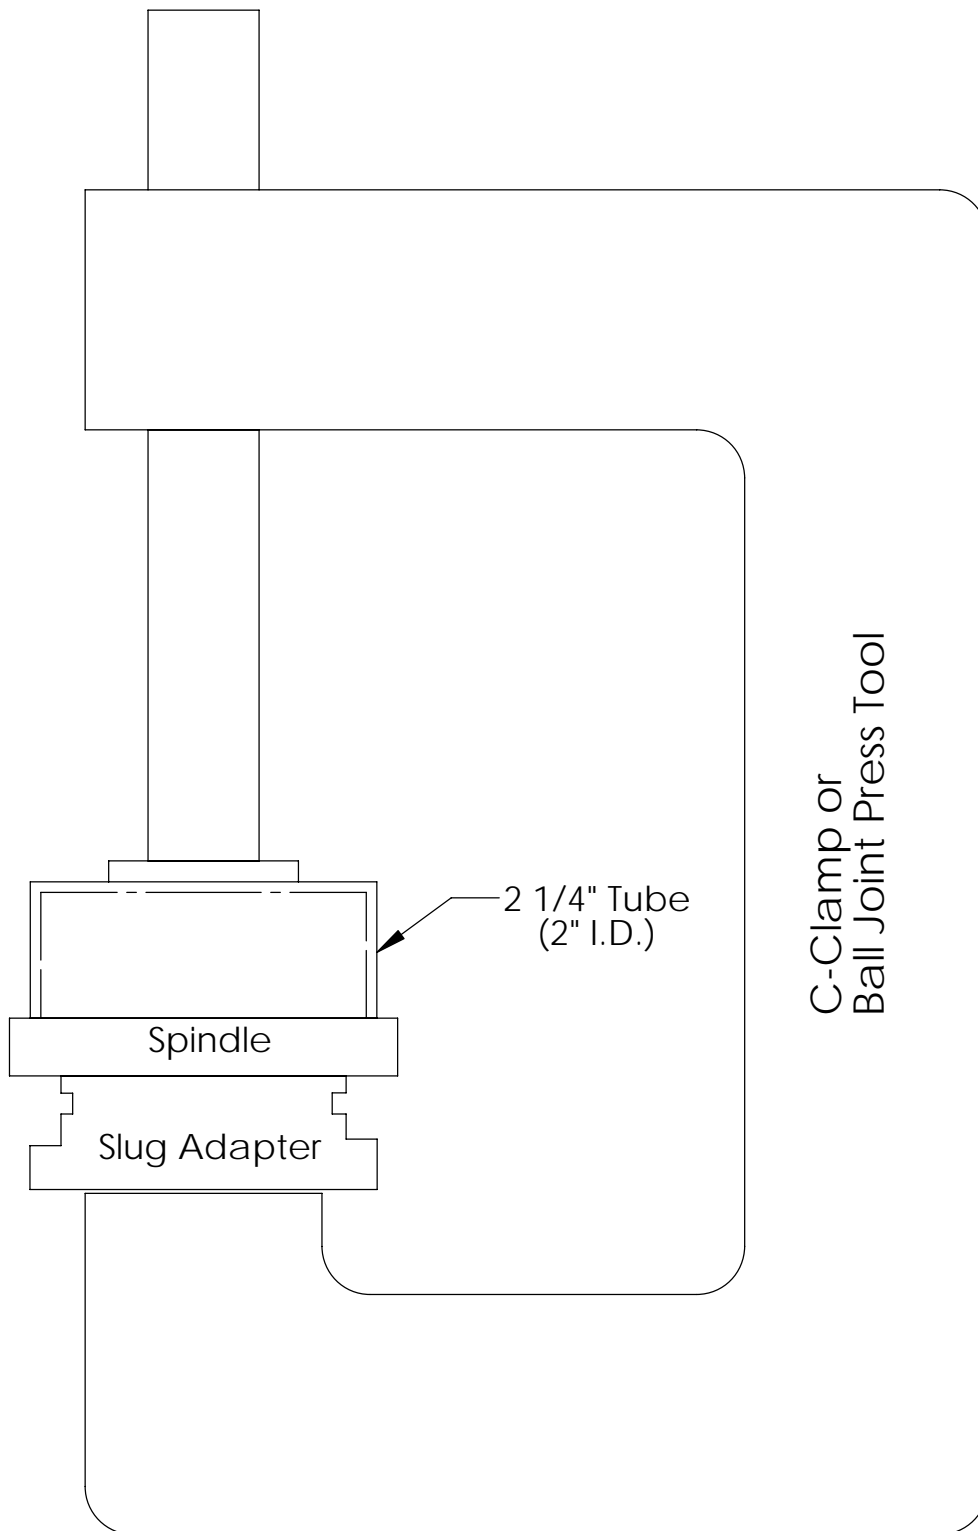

Tighten  
Clamp to  
press slug  
adapter up  
into spindle

Lube spindle with anti-seize or grease  
Press slug adapter up into spindle until seated  
Install new snap ring and bolt uniball with spacers  
into slug adapter.  
Torque 3/4" bolt to 110 ft./lbs.