




# UNIVERSAL LOWER REAR SHOCK MOUNT

---



## Kit Contents:

- (2) Weld-On Shock Mounts
- (4) 3/8" Spacers
- (4) 1/4" Spacers
- (2) 1/2"-20 x 3.5" Grade 8 Bolts
- (4) 1/2" AN Washers
- (2) 1/2" Nylock Nuts

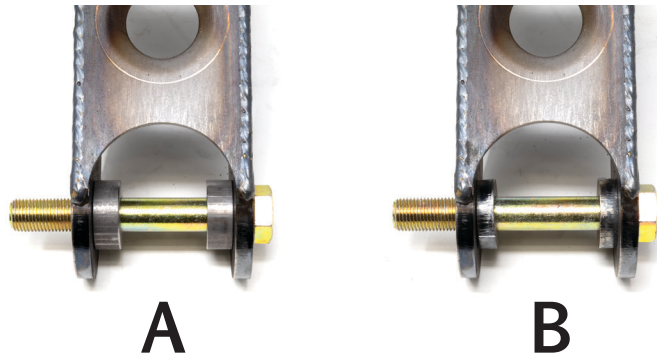

## Install Notes:

- Use 3/8" spacers for shocks with 1 1/4" wide rod ends. See ex. 'A' above.
- Use 1/4" spacers for shocks with 1 1/2" wide rod ends. See ex. 'B' above.
- Shock mounts are designed to fit a 3" diameter axle housing but can be opened up to fit larger axles.
- Use one spacer on each side of the rod end, or both on same side to offset the shock in the mount if desired.